



BestTrack® Pinewood Derby® Tracks
by SRM Enterprises, Inc.

P.O. Box 53


Forest City, IA 50436

641-585-2299 or Toll Free 1-888-582-2299

Assembly Instructions for **BestTrack®** Semi Extensions



4-Lane Semi Extension Top View

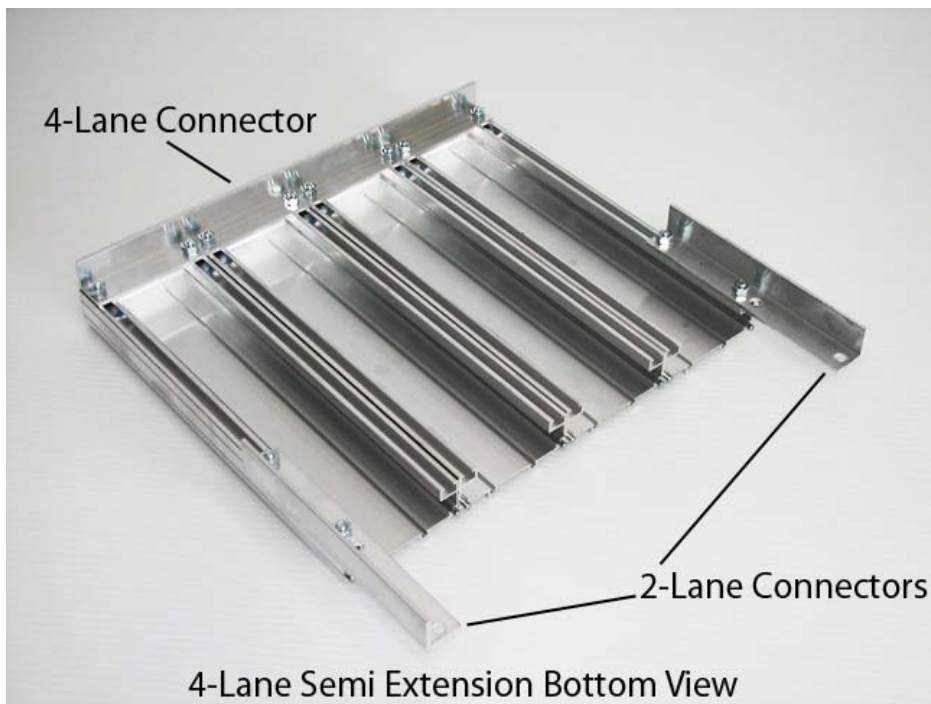

4-Lane Semi Extension Bottom View

Assembly:

Please note that a 4-lane semi extension is shown in these photos.

Place a connector angle at the top end of the lane extensions, locking the lane extensions side by side, using the 1/4-20 nuts & bolts. **This connector angle will be the same width as your track. Be sure to line up the tongue & groove on the sides of each extension.**

Add two 2-lane connectors as shown to the assembly.

Insert and tap in dowel pins, 2 per lane, in the outer edge dowel pin holes of each lane, as shown in the photo, until the knurled part of the pin is completely inside the extruded hole.

Move the top end caps from your existing start lane to the top end of the extension.

Attach the extension assembly to your track using two 1/4-20 nuts and bolts in the outer mounting slot of the first and last lanes of your track.

Check out additional **BestTrack®** Aluminum Pinewood Derby Track Products and Space Derby Tracks at www.besttrack.com

by SRM Enterprises, Inc.

P.O. Box 53, Forest City, IA 50436
641-585-2299 or Toll Free 1-888-582-2299